

How to Use a Cotton Candy Machine

Setup.

1. Place the cotton candy machine on a stable, level surface, such as a table or counter.
2. Make sure to set up the cotton candy machine near a grounded, electrical source. We prefer not to use extension cords if possible.
3. Inspect cotton candy machine to ensure all parts are in place and that it is not in the transportation mode.

Instructions.

1. Use a clean, damp cloth to moisten the inside of the floss pan on the cotton candy machine to help the floss adhere to it.
2. Use floss sugar to fill floss pan 90 percent full.
3. Plug in and turn on the cotton candy machine. Allow floss to accumulate for 3-4 minutes.
6. Hold the pointed end of a cotton candy cone between two fingers and thumb.
7. Use a light flicking motion to break into the web of floss with cone.
8. Use the cone to lift up the floss over the pan before winding the floss around the cone.
9. Turn the cone in a figure-eight pattern to gather a larger web of floss.

Cleaning. Clean the cotton candy machine if you do not plan to use it again for several hours.

1. Run all of the sugar out of the floss head on the cotton candy machine.
2. Turn on heating element of the cotton candy machine for about a minute to remove any remaining sugar.
3. Unplug the cotton candy machine.
4. Use a damp cloth to wipe floss head on cotton candy machine. Do not immerse floss head in water or place it under running water.
5. Dry the cotton candy machine thoroughly.
6. Wash the cotton candy machine's bowl and bubble.